Reusable Vinyl Balloon 5-Balloon Cluster

Stems twist onto brackets and lock in place!

GREAT AMERICAN'S EXCLUSIVE HELIUM-FREE BALLOONS:

- ★ Durable for Outdoor Use
- ★ Highest Quality Guaranteed
- ★ Easy Twist-Lock Mechanism
- ★ Guaranteed to last 90 days or your money back


5 Balloon Cluster Kit Includes:

A. 5 Regular 17" Reusable Vinyl Balloons (*Item GABOBTR*)

Α

В

- B. 5 Regular Balloon Cups (Item GABB9)
- C. 5 40" Regular Balloon Stems (*Item GABB4*)
- D. 1 Cluster Pole with 2 Balloon Brackets
- E. 1 20" Fiberglass Ground Spike (*Item GABB1*)
- F. 1 Aluminum Plate (Item GABBPLATE)

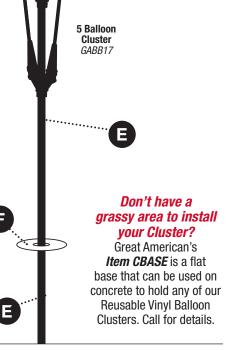



D

REV 12/20



  1. Balloon Assembly:





1. Line up the *balloon cup* (B) with the grooves on the side of the *stem* (C). Snap cup into place. Repeat with all stems and cups.

2. Attach the *balloon* (A) onto the *stem* (C) by lining the silver push pin located on the black piece at the bottom of the balloon with the hole on the bottom of the appropriate cup. Lock the balloon in place.

WARNING

USE EVE PROTECTION

WHEN INFLATING!!!

3. After the *cup* and *stem* are assembled, remove *white air plug* from top of each *balloon* to inflate. Inflate using a hand air pump or an air compressor with a tapered fill nozzle tip.*


4. Reinsert *white air plug* into inflation hole after fully inflated. The maximum diameter should be 17". Repeat steps 2-4 with all balloons.

*Note: Great American's Item RCOMPRESSOR is compatible with all of Great American's reusable balloons.

Inflation Tips: For best results, inflate outdoors with an air compressor. **DO NOT OVERINFLATE. BALLOONS MAY BURST AND CAUSE INJURY.** Inflate balloon just to the point where balloons feel tight. NOTE: A 20° fluctuation in temperature may cause slight deflation.

2. Ground Spike Installation:

1. Using a rubber mallet or hammer, pound the *ground spike* (E) into the ground approximately 10-12". Make sure to leave at least 8-10" of the spike visible above ground. Make sure your spike is installed as vertically as possible to ensure it will support the weight of your cluster.

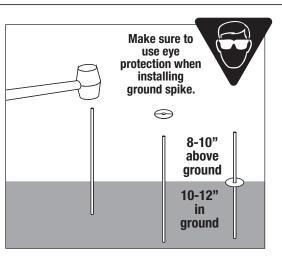

2. Slide the circular

aluminum plate (F) onto

the top of the spike and set it flush with the ground. Slide your Cluster Pole (D) onto the exposed spike.

Installation Tips:

- Do not drive spike into rocky ground or hardened soil. If soil is too dry, try soaking the area for a few minutes to soften it.
- Do not install in the way of any sprinkler systems or utility lines.

3. Cluster Assembly:

